




Liquid Damage Technique

This guide is a liquid damage repair guide. If the device is not working and the probable cause is liquid spill then this is the guide for you.

Written By: Derek Myers

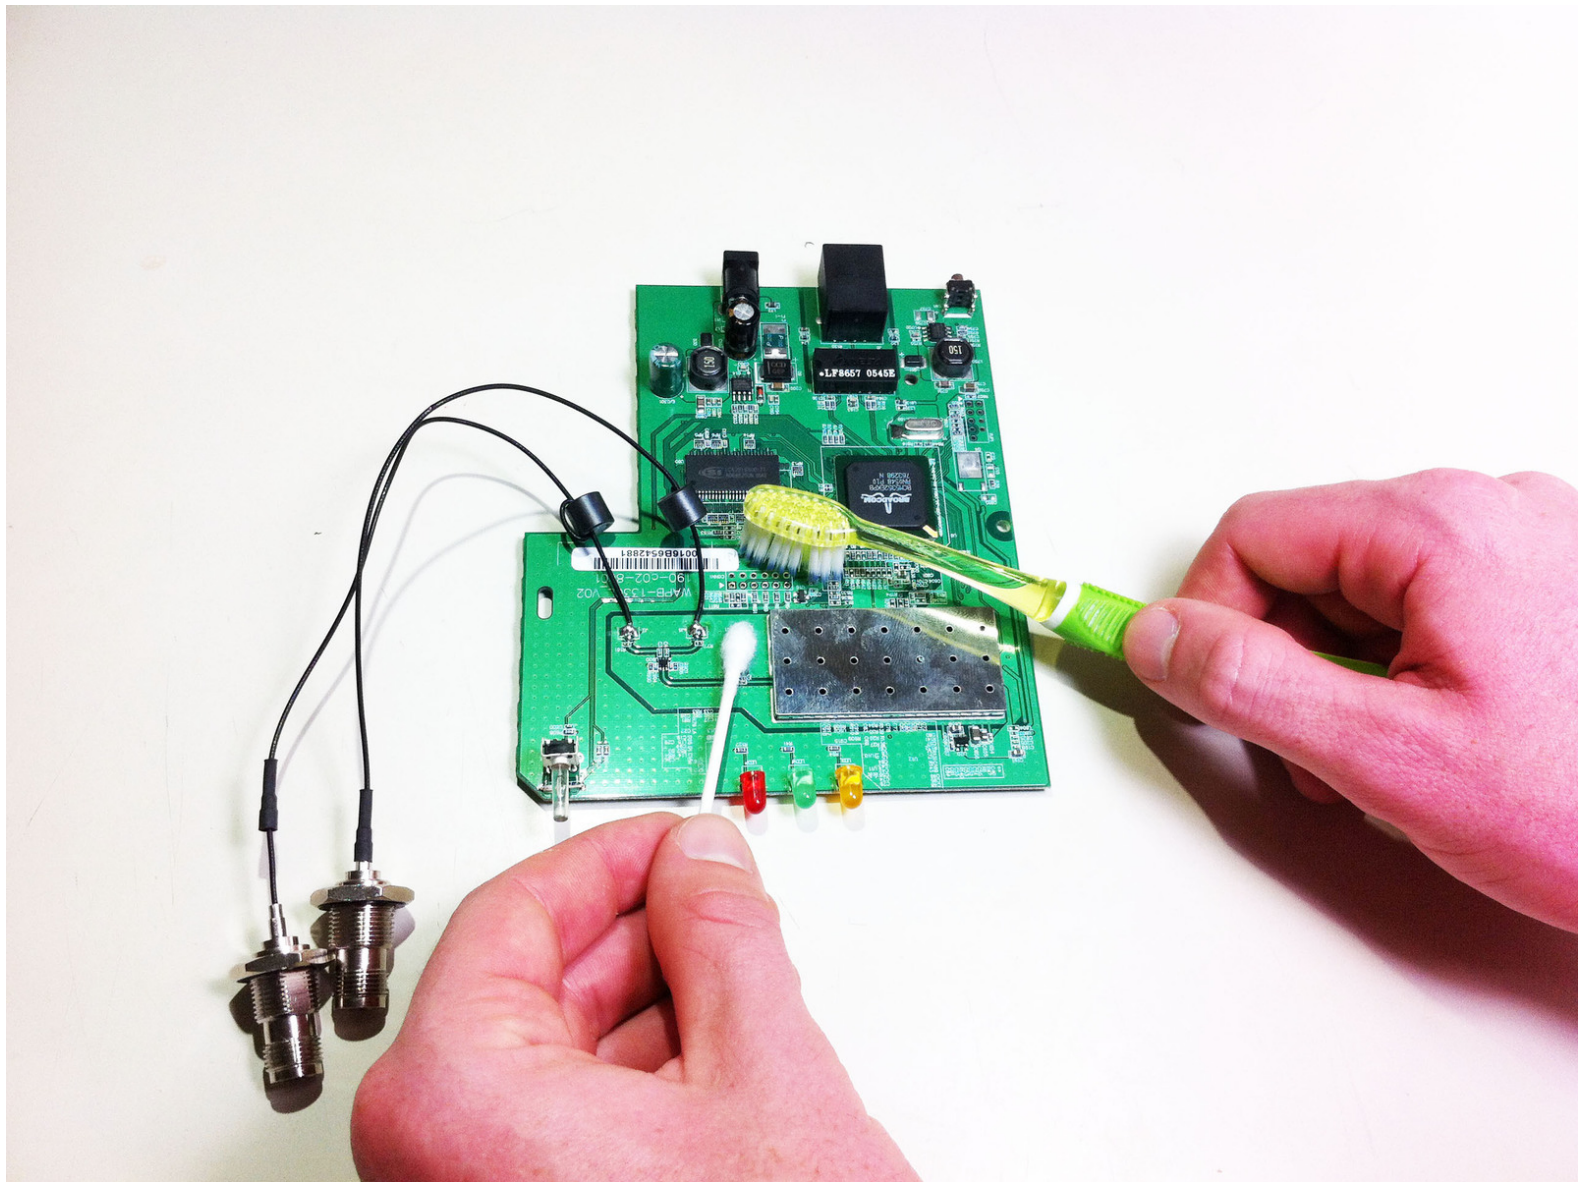

INTRODUCTION

In this guide we will go over repairing the WAP54g when there is water damage. If something is spilled or you realize that there is liquid inside the device it is recommended to turn it off and unplug it as soon as possible. This guide is an attempt to fix the router if all else fails.



TOOLS:

- [High Content Rubbing Alcohol](#) (1)
 - [Kitchen Paper](#) (1)
 - [Q-Tips](#) (1)
 - [Toothbrush](#) (1)
-

Step 1 — Top Casing



- Power down and unplug the device.

Step 2



- Remove the antennas from the back of the device. To do this, follow steps 1 and 2 of Installing the Antennas Guide: [Linksys WAP54g Antennas Replacement](#)

Step 3



- Remove the two black rubber feet of the device using the screwdriver. The feet are located on the bottom towards the front.

Step 4



- Once the feet are removed, two small screws will be visible. With a small screwdriver, unscrew them. Screws are phillips head, 4.35 mm in diameter, 7.88 mm in length.

Step 5



- To remove the front blue panel, grip firmly and place thumbs in the two notches on top. Push thumbs forward while keeping a firm grip on bottom.


 This may require a bit of force.

Step 6





- Now slide the bottom panel forward and remove it so the top casing is isolated from the bottom casing and motherboard.

Step 7

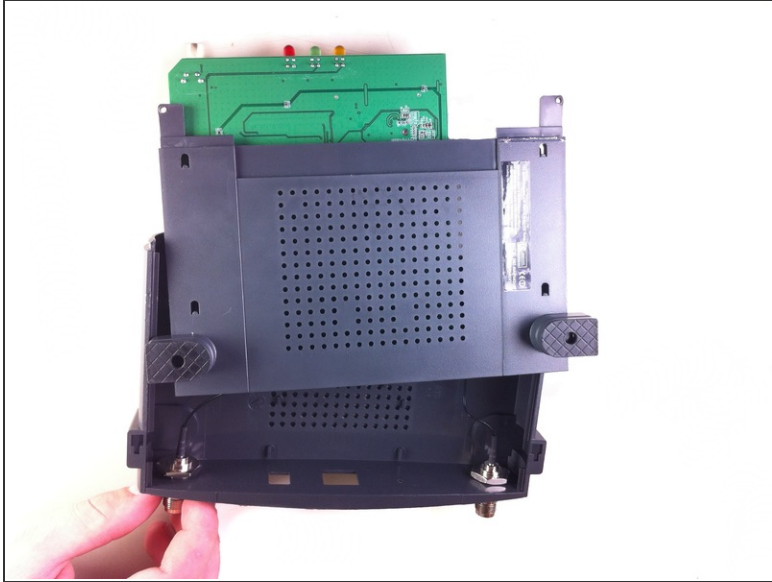



- Unscrew the nut on the outer side of the back casing. Remove the nut and the washer from both antenna mounts.

Step 8

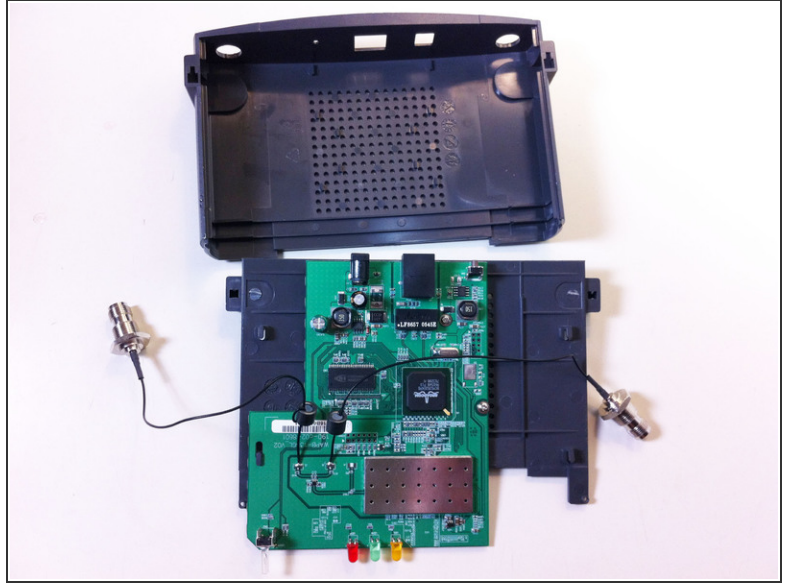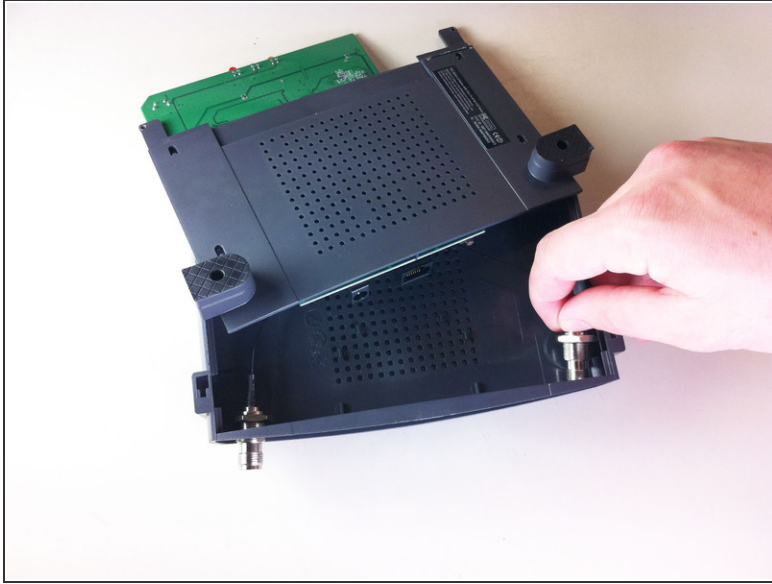

- From here, remove the wires and nuts connected to the back panel by pulling the nuts through the holes.
 - Now the top casing has been removed and isolated from the rest of the device. From here, you can make repairs to the top casing.
- ⓘ Once the top panel is removed the main board will still be attached to the bottom panel.


Step 9 — Bottom Casing/Motherboard

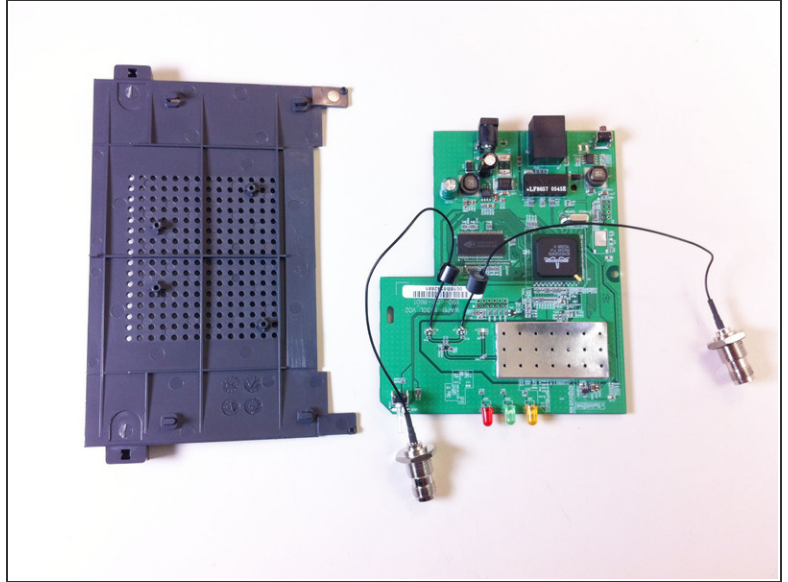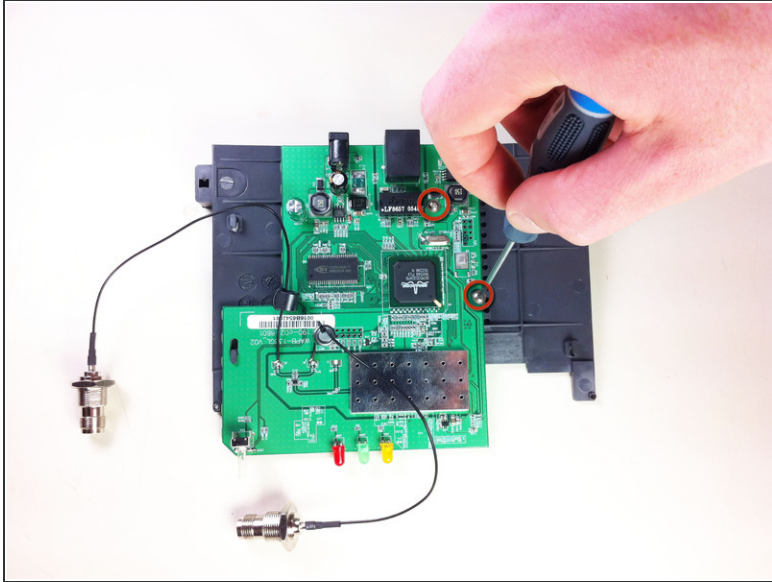

- Unscrew the two screws that connect the motherboard to the bottom casing.


i The motherboard and bottom casing should be completely separated at this point. This allows for replacement of the motherboard and/ or its components as well as the bottom casing.

Step 10 — Liquid Damage Technique

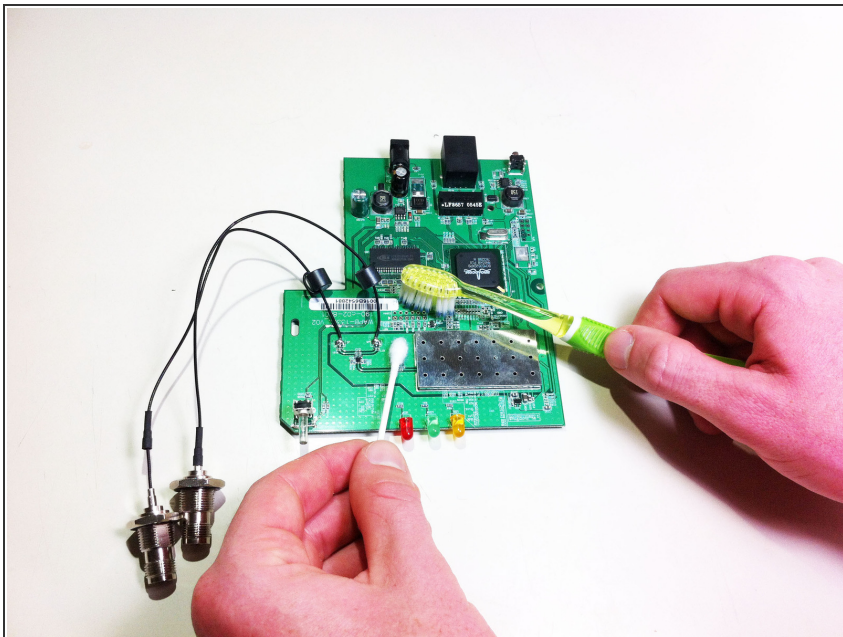


- If the spilled substance is dry use a cleaning tool such as a toothbrush with soft bristles, so you do not damage the device, to brush off as much of the foreign material as possible.

Step 11

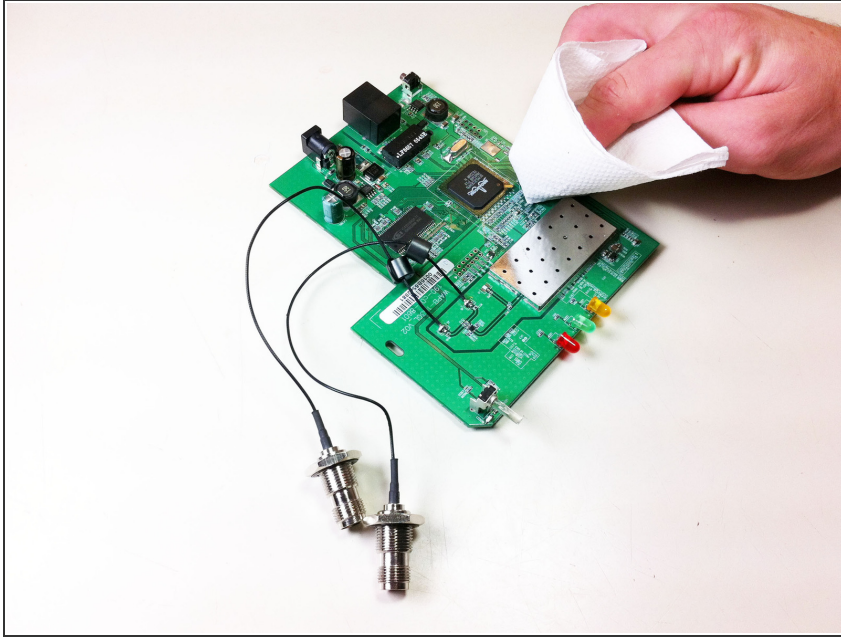

- Dry off circuit board with kitchen paper; using other types of paper products such as toilet paper will fall apart. Be sure not to rub but carefully apply pressure to dry up wet spots.

Step 12

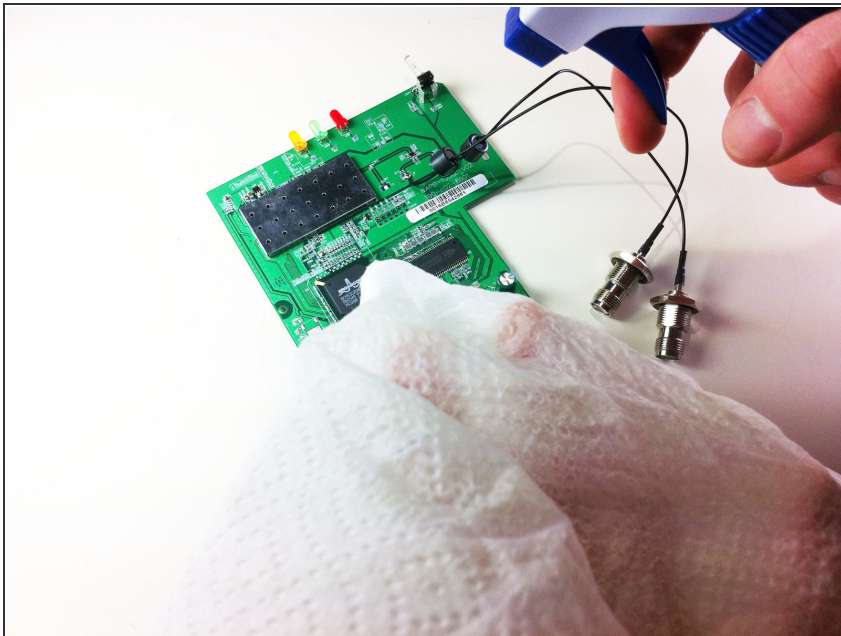

- Clean off the components to make sure the rest of the residue comes off by using a chemical gasoline or another solvent that contains one substance that evaporates quickly.

After the device is cleaned and put back together it should work properly.